



Certificado CE : <https://www.ikusi.tv/es/productos/sba-101>  
 CE Marking : <https://www.ikusi.tv/en/products/sba-101>  
 Certificate CE : <https://www.ikusi.tv/fr/products/sba-101>



# SBA-101

## AMPLIFICADORES DE MÁSTIL MAST AMPLIFIERS AMPLIFICATEURS POUR MÂT


MODELO MODEL MODÈLE	REF.	Serie SBA101	
SBA-101-C69	1294	Frecuencias Frequencies Fréquences	470 - 862 MHz
SBA-101-C60	1295		470 - 790 MHz (1 <sup>er</sup> dividendo)
SBA-101-C48	1296		470 - 694 Mhz (2 <sup>o</sup> dividendo)
Entradas Inputs Entrées			2 UHF
Salidas Outputs Sorties			1
Ganancia Gain	dB		> 36
Regulación de ganancia Gain adjustment Réglage de gain	dB		0 - 15
Figura de ruido Noise figure Facteur de bruit	dB		≤ 5
Nivel de salida (DIN-B, -60dB) Output level Niveau de sortie	dBμV		105
Desacoplo entradas Input isolation Découplage entrées	dB		≥ 26
Tensión alimentación Mains supply voltage Tension secteur	VDC		+24
Consumo Consumption Consommation	mA		55
Índice de protección Protection level Niveau de protection	IP		IP54
Dimensiones Dimensions	mm		96 x 125 x 46

## Fijación al mástil / Fixing to the mast / Fixation au mât




brida de plástico suministrada  
plastic clamp supplied  
côllier plastique fourni

mástil ( $\varnothing \leq 50\text{mm}$ )  
mast  
mât



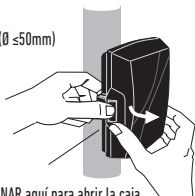


- PRESIONAR aquí para abrir la caja
- PRESS here to open the box
- PRESSER ici pour ouvrir le boîtier

atenuadores variables de entrada  
input variable attenuators  
atténuateurs réglables d'entrée

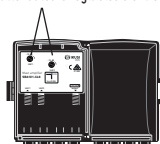

## Conexiones RF / RF connections / Raccordements HF

 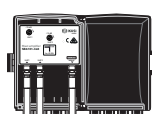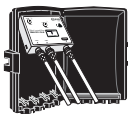

percha  
hanger  
cintre



1. Levantar la caja interior  
Raise the internal housing  
Lever la boîte interne

2. Efectuar las conexiones  
Make the connections  
Faire les connexions

3. Recolocar la caja interior  
Put the internal housing back  
Remettre la boîte interne

al alimentador  
to the power supply  
vers l'alimentation

## Ejemplo de aplicación / Application example / Exemple d'application

